

ECM-55S/55B**5-2. Electrical Parts List**

 
Ref. No.	SP	Part No.	Description
AMPLIFIER BOARD			
-	S	A-4518-240-A	MOUNTED PCB,AMPLIFIER
EX-85 BOARD			
-	S	1-614-223-12	PC BOARD,EX-85
TR-28 BOARD			
-	S	A-4538-025-A	MOUNTED PCB,TR-28
FRAME			
-	S	1-509-096-00	PIN INSERT,CANNON KLR-3-14
-	S	1-557-884-11	CABLE,MICROPHONE

5-3. Accessories Supplied

Qty	SP	Part No.	Description
1	S	2-599-255-01	MANUAL,INSTRUCTION (For J Model)
1	S	2-599-255-12	MANUAL,INSTRUCTION (For E Model)
1	S	2-599-255-21	MANUAL,INSTRUCTION (For US Model)
For ECM-55S Only			
1	S	X-2522-013-1	CLIP ASSY,HORIZONTAL
1	S	X-2522-014-1	CLIP ASSY,DOUBLE (For US Model Only)
1	S	X-2522-016-1	CLIP ASSY,VERTICAL (For J and E Models Only)
1	S	X-2522-021-1	CASE ASSY,CARRYING
1	S	X-2522-024-1	WIND SCREEN ASSY
For ECM-55B Only			
1	S	X-2522-010-1	CLIP ASSY,HORIZONTAL
1	S	X-2522-011-1	CLIP ASSY,DOUBLE (For US Model Only)
1	S	X-2522-012-1	CLIP ASSY,VERTICAL (For J and E Models Only)
1	S	X-2522-022-1	CASE ASSY,CARRYING
1	S	X-2522-023-1	WIND SCREEN ASSY

WIND SCREEN ASSY

HORIZONTAL CLIP ASSY VERTICAL CLIP ASSY DOUBLE CLIP ASSY



ECM-55S/55B

5. REPLACEABLE PARTS

Parts Ordering Information

Standardization of Parts

Repair parts supplied from Sony Parts Center may not be always identical with the part which actually in use due to "accommodating the improved parts and/or engineering changes" or "standardization of genuine parts".

This manual's exploded views and electrical parts list are indicating the part numbers of the "standardized genuine parts at present".

Parts marked with S in the column of SP

These parts are normally stocked as replaceable parts.

Parts marked with O in the column of SP

Orders for these parts will be processed, but allow for additional delivery time.

Parts without Part No.

These parts are not stocked because they are seldom required for routine service.

5-1. Exploded View and Parts List

Index No. SP Part No. Description

Index No.	SP	Part No.	Description
1	S	A-4510-048-A	CAPSULE ASSY (For ECM-55S)
	S	A-4510-051-A	CAPSULE ASSY (For ECM-55B)

Index No.	SP	Part No.	Description
2	S	A-4518-240-A	MOUNTED PCB, AMPLIFIER
3	S	A-4538-025-A	MOUNTED PCB, TR-28
4	S	1-509-096-00	PIN INSERT, CANNON XLR-3-14
5	S	1-543-060-00	CORE
6	S	1-557-884-11	CABLE, MICROPHONE
7	S	1-614-223-11	PC BOARD, EX-85
8	O	2-522-065-01	LABEL, MODEL NUMBER (For ECM-55B)
	O	2-522-082-01	LABEL, MODEL NUMBER (For ECM-55S)
9	O	2-522-068-01	SLEEVE, PIN, CANNON
10	O	2-522-069-01	SLEEVE, BATTERY
11	S	2-522-070-01	LID, CASE
12	S	2-522-071-01	TERMINAL, BATTERY
13	S	2-522-072-01	SPRING
14	S	2-522-074-01	BUSHING, POWER
15	O	2-522-075-01	CASE, REAR, CAPSULE (For ECM-55S)
	O	2-522-075-11	CASE, REAR, CAPSULE (For ECM-55B)
16	O	2-522-076-01	SCREW, JOINT
17	O	2-522-078-01	PLATE, GROUND
18	S	2-522-079-11	BUSHING, MICROPHONE
19	S	2-522-084-01	CASE, BATTERY
20	O	2-522-402-11	SCREW, CANNON CONNECTOR
21	O	2-523-710-00	LABEL, BATTERY
22	S	7-621-255-12	SCREW, +P2x3
23	S	7-623-305-07	LOCK WASHER, M2, TYPE (A)
24	S	7-623-505-01	LUG 2
25	S	7-627-452-17	SCREW, PRECISION +K2x3
26	S	7-627-553-87	SCREW, PRECISION +P2x7

