
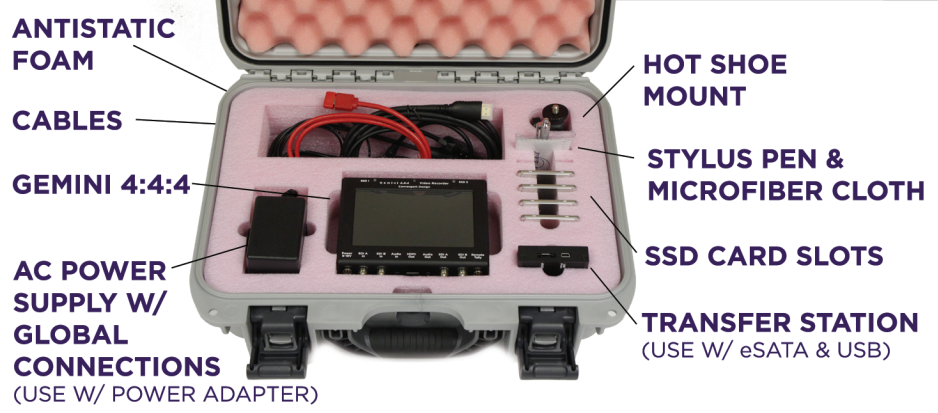


# GEMINI 4:4:4 QUICK START GUIDE

You will need to register your Gemini to activate the unit. Read these instructions before using your product.

## 1 Identify

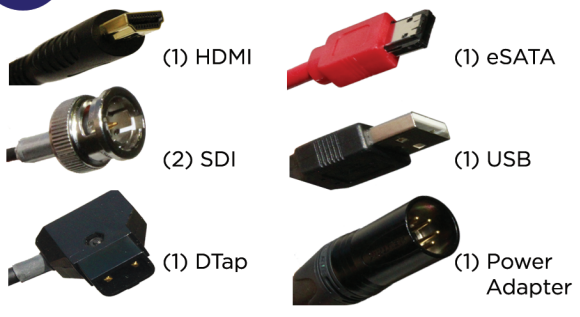

## 2 Register

1 Please visit [www.gemini444.com](http://www.gemini444.com) and click 'Register', or scan the QR code with your smart phone or iPad.



2 Fill out the brief form. This information is used to keep you updated with free firmware updates.


3 Capture and record your activation key. This key is unique to your unit, and must be entered to activate the unit.



**Only Convergent Design SSD cards will work.**

**Note:** SSD cards must be formatted in the Gemini only, and before initial record to card.  
**WARNING: UNRECOVERABLE!** Formatting the SSD irreversibly removes all data.

**Note:** Gemini 4:4:4 supports drive spanning. You can record to SSD 1 or 2.

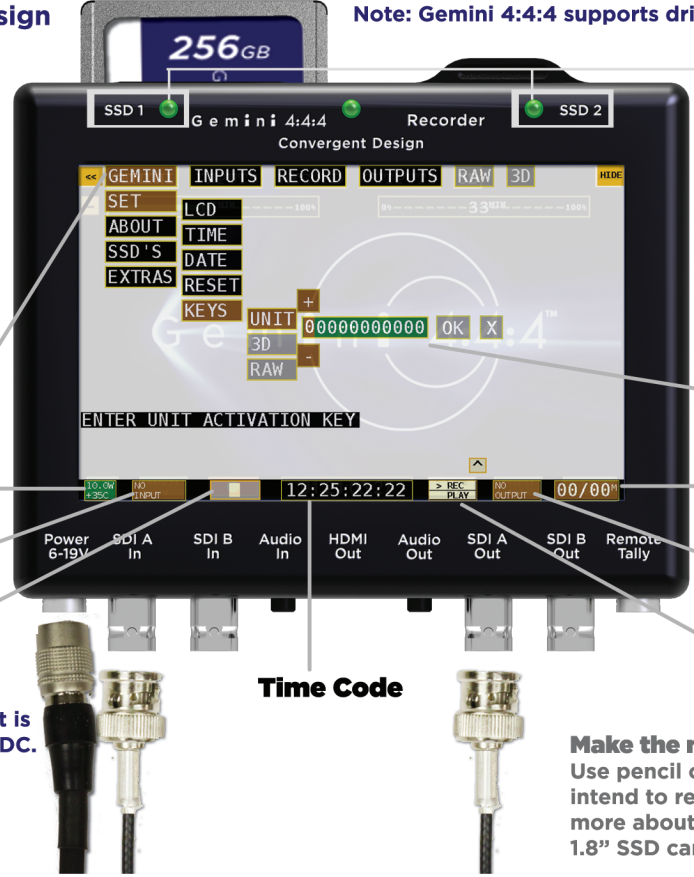

### SSD Status - Color Indicators

- Drive needs to be formatted within the Gemini.
  - Drive is completely full and can be played back or formatted for a new record.
  - Drive is ready to record.
  - SSD is initializing.
  - Drive is currently playing back.
  - Drive is currently recording.
- DO NOT REMOVE SSD's during Recording or Playback!**

### Enter Activation Key

**Remaining Record Time**  
SSD 1 / SSD 2

### Output Indicator

### Mode Switch

Arrow indicates Rec or Play Mode

**Gemini Menu System**  
Tap to reveal menu options

**Internal Power / Temp**

**Input Indicator**

**Record / Play / Stop Button**  
Toggle between Mode to change

**WARNING: Power input is limited to 6-19 Volt DC.**

**Make the most of your SSD Card:** Use pencil on the back label if you intend to reuse your card! Learn more about Convergent Design 1.8" SSD cards here!



## 3 Connect

- 1 Connect the power supply to the Gemini.
- 2 Gemini will turn on. Proceed with activation.

## 4 Media

- 1 Open the SSD door and gently insert the SSD card(s), with label facing you.
- 2 Connect SDI cables.

**WARNING: DO NOT REMOVE THE POWER, OR EITHER SSD CARD, DURING RECORD OR PLAYBACK.**

## 5 Record / Playback

- 1 Press the red Record Button.
- 2 Press the blue Stop Button that replaces the record button during record.
- 3 Press the Mode Switch to toggle between Play/Record Mode.

## 6 Transfer

- 1 Connect the USB (for power only) and the provided eSATA (for data transfer) and copy data to computer.



# GEMINI 4:4:4 REC/PLAY MODE



## GEMINI 4:4:4 FEATURE LIST

### INITIAL RELEASE

- Video Record and Playback of: 1080p23.98 4:2:2 / 4:4:4  
1080p25 4:2:2 / 4:4:4
- DPX RGB 4:4:4 File Format
- RGB 4:4:4 input via HD-SDI Dual Link
- One Built-in S-Log Viewing LUT, Enabled Via Menu Option
- 256/512GB SSD Support (Convergent Design SSD's Only)
- Record Triggers: LCD Button and/or HD-SDI Incrementing Time Code
- 1:1 Pixel Mapping Mode onto 800x480 LCD Monitor
- SSD Drive Spanning

### NEAR TERM

- Two-Channel Embedded Audio Record / Playback
- 1080p29.97 Support
- Playback Control
- 3D (paid upgrade)
- Remote Record Trigger

### FUTURE

- 1080p50/59.94, 720p50/59.94, 2048x1080p23.98
- HDMI Out, Analog Audio I/O, LTC I/O
- Time-Lapse, Over/Under Crank
- ARRIRAW (paid upgrade)
- Programmable LUTs
- Metadata
- HD-SDI Record Triggers
- Power Save Mode

For additional Resources, visit [www.Gemini444.com](http://www.Gemini444.com) / [www.convergent-design.com](http://www.convergent-design.com),  
or contact Support at 720.221.3861 / 719.930.1376 / 803.278.0941.