


5. REPAIR PARTS LIST

5-1-5. HANDLE SECTION-1

ns : not supplied

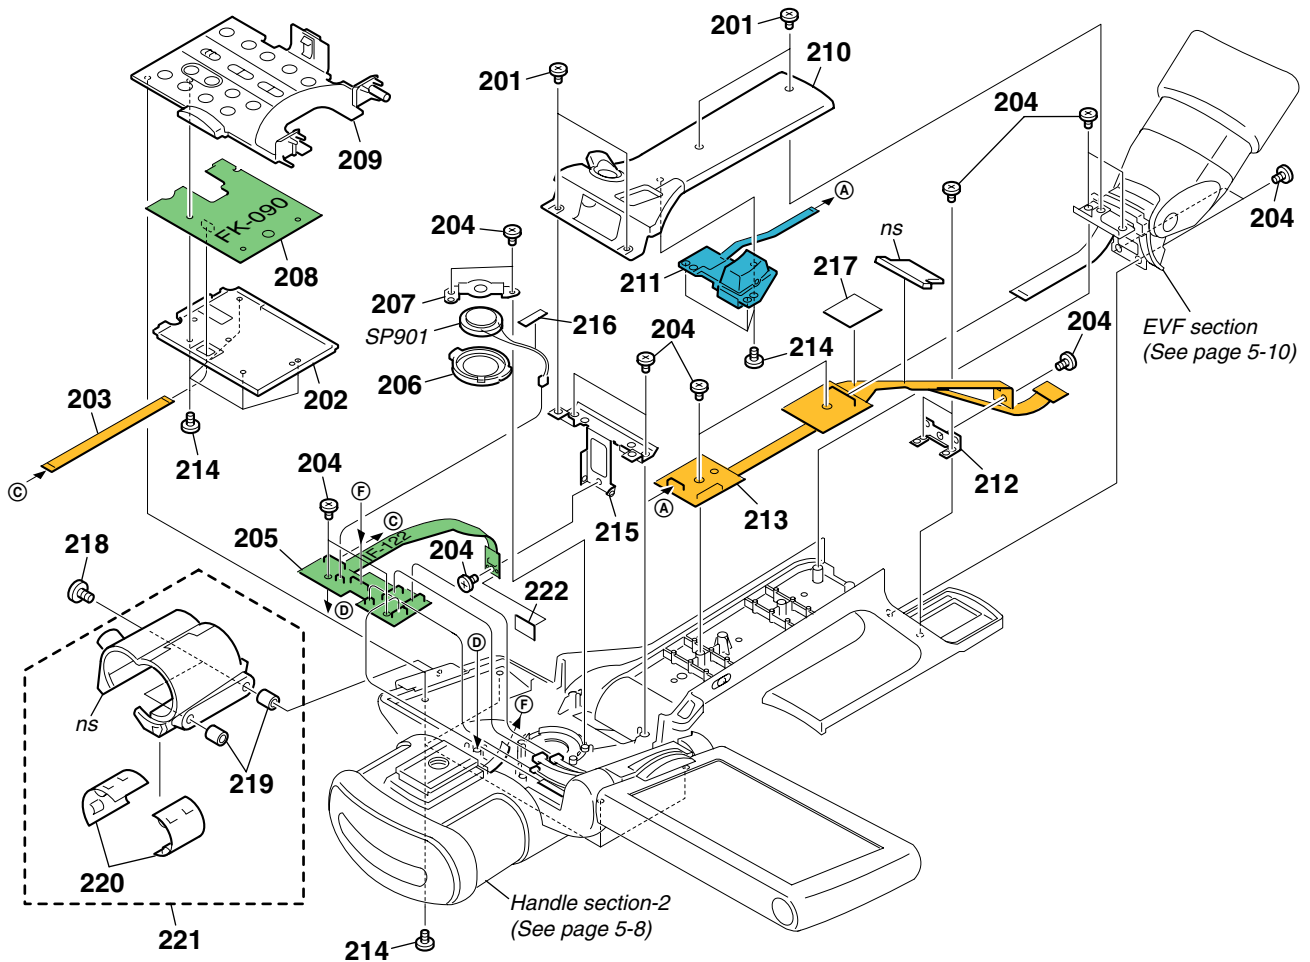

Ref. No.	Part No.	Description
201	3-080-203-31	SREW (M2), LOCK ACE, P2
202	2-178-564-01	COVER, BUTTON
203	1-829-703-11	CABLE, FLEXIBLE FLAT (FDM-009)
204	3-080-202-21	SCREW (M2), LOCK ACE, P2
205	A-1073-871-A	IF-122 BOARD, COMPLETE
206	2-178-550-01	HOLDER, SPEAKER
207	X-2023-281-1	RETAINER ASSY, SPEAKER
208	A-1073-865-A	FK-090 BOARD, COMPLETE
209	X-2023-936-1	CABINET ASSY (D), HANDLE PANEL
210	X-2023-934-1	CABINET (UPPER) ASSY (D), HAND
211	1-478-955-11	SWITCH BLOCK, CONTROL (ZS-5610)
212	2-179-995-01	BRACKET (REAR, PWB) CHASSIS

Ref. No.	Part No.	Description
213	A-1073-876-A	FP-980 FLEXIBLE BOARD
214	3-080-206-21	SCREW, TAPPING, P2
215	2-178-400-01	BRACKET, IF
216	3-061-516-01	SHEET, RF FLEXIBLE
217	3-060-795-01	TAPE, HARNESS FIXED
218	3-719-159-11	SCREW (M3), (+ BW)
219	3-654-058-02	SPACER 3X3
220	3-608-303-01	RUBBER
221	X-2023-933-1	HOLDER ASSY, MICROPHONE
222	2-547-787-01	SHEET (BB)
SP901	1-825-968-11	LOUDSPEAKER (1.8CM)